TCR-02T CONTROL ELECTRICAL ACTUATOR

FEATURES

The TCR-02T electric actuator is intended for motorising ¼ turn valves with a torque of 20 Nm. **Control function**: this motor is used to control the position of the valve depending upon an a 4-20mA or 0-10V input signal. With a compact construction and plastic housing, they are especially well suited for motorising small size ball valves. IP67 leak-tightness: to be used indoors and, possibly, outdoors under a shelter. Possible installation in parallel. Manual control with a key. This actuator has many functions. Parameter setting is done directly on the screen.

AVAILABLE MODELS

Supply voltages: 230V AC, 24V AC/DC.

Control: 4-20mA, 0-10V



LIMITS OF USE

IP Code	IP 67
Ambient temperature	- 20°C / +60°C
Service factor	S4 - 50%

MECHANICAL FEATURES

Gear box	treated steel pinions
Torques	20 Nm
Angle of rotation	90° +/- 2°
Declutching	without
Override control	By key

Actuator	**TCR 02T**	
Torques (Nm)	20	
Voltage	24V AC - DC	95-265V AC-DC
Adjustment signal	4-20mA / 0-10V	
Manoeuvring time (s)	10	10
ISO 5211:	F03/F05 - star 11	

ELECTRICAL FEATURES


Actuator	**TCR 02T**
Motor protection	Thermal switch
Limit switches	Without
Auxiliary switches	Without
Anti-condensation	integrated
Electrical connection	PE M10 + 1.5m cable

Actuator	**TCR 02T**	
Voltage	24V AC - DC	95-265V AC-DC
Power (W)	10	10
Current (A)	0,35	0,035 - 0,075
Fuse protection (A)	2	1


Information given as an indication only, and subject to possible modifications

CONSTRUCTION (TCR-02T)

TCR-02T					
No.	**Name**	**Material**	**No.**	**Name**	**Material**
1	Casing + lid	Plastic (ABS)	**7**	1.3” LCD display	OLED
2	Position indicator	Polycarbonate plastic	**8**	Rating plate	PVC
3	Screw x 4	Ansi 304	**9**	Packing gland	Nylon
4	Backup control stem	Ansi 304	**10**	Hex key	Steel
5	Gasket	NBR	**11**	Key support	Plastic (ABS)
6	Adjustment button	Rubber	**12**	Cover gasket	NBR
Weight (kg): 0.620					

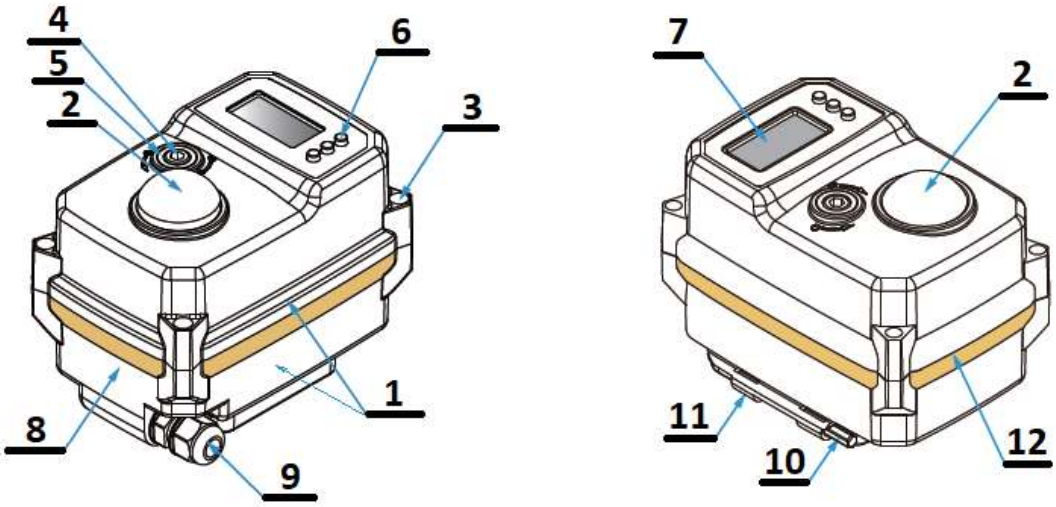


DIMENSIONS (mm)

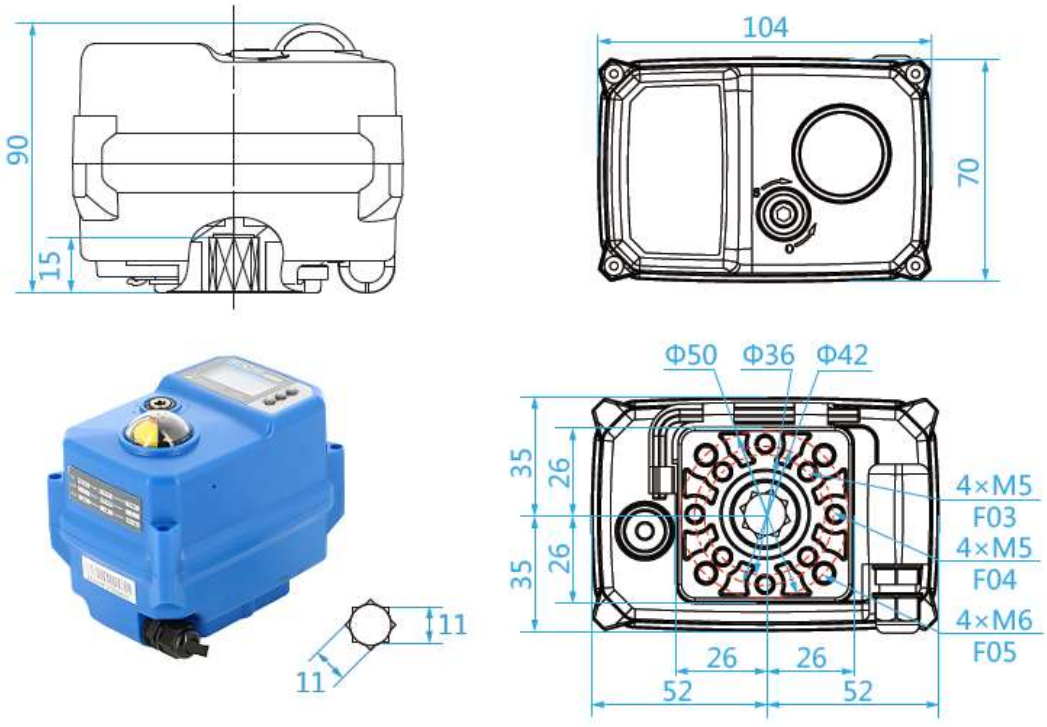

Information given as an indication only, and subject to possible modifications


WIRING DIAGRAM (TCR 02T)

BU	Neutral (Blue)
RD	Phase (Red)
BR	Current control signal output (Brown)
WT	Common (White)
GY	Current control signal input (Grey)
BK	Alarm signal (Black)
PL	Alarm signal (Purple)
Y/G	Terre (Jaune/Vert)

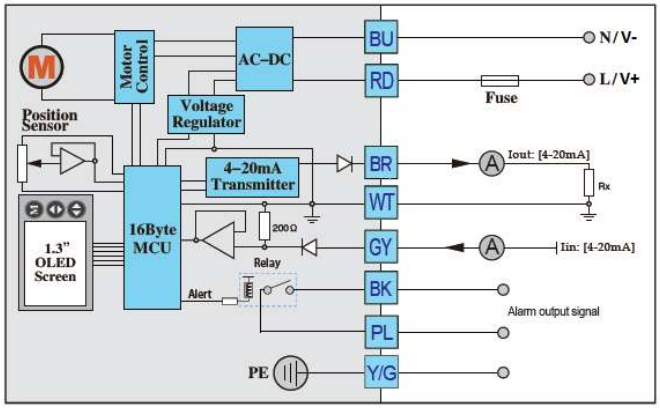


SCHEMA 4-20mA

Version 4-20mA / 0-10V :

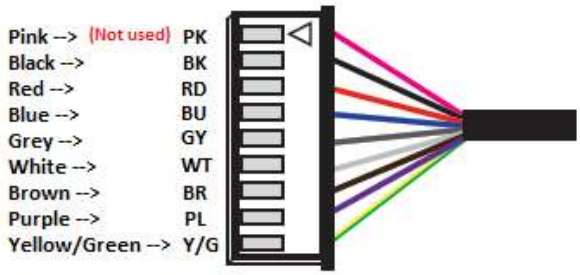


BU	Neutral (Blue)
RD	Phase (Red)
BR	Voltage control signal output (Brown)
WT	Common (White)
GY	Voltage control signal input (Grey)
Y/G	Earth (Yellow / Green)
BK	Not used
PL	Not used

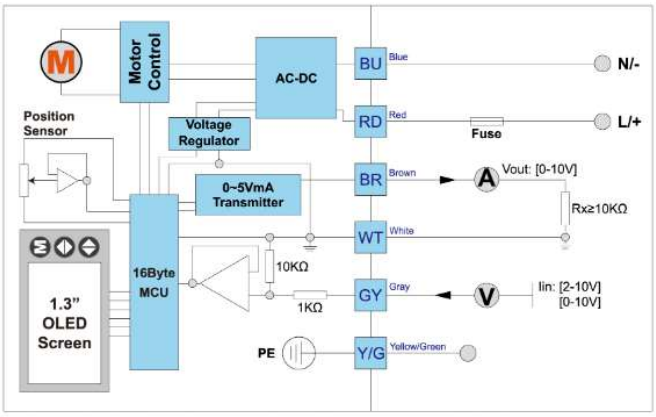

SCHEMA 0-10V

Information given as an indication only, and subject to possible modifications

DESCRIPTION OF THE 1.3'' LCD SCREEN

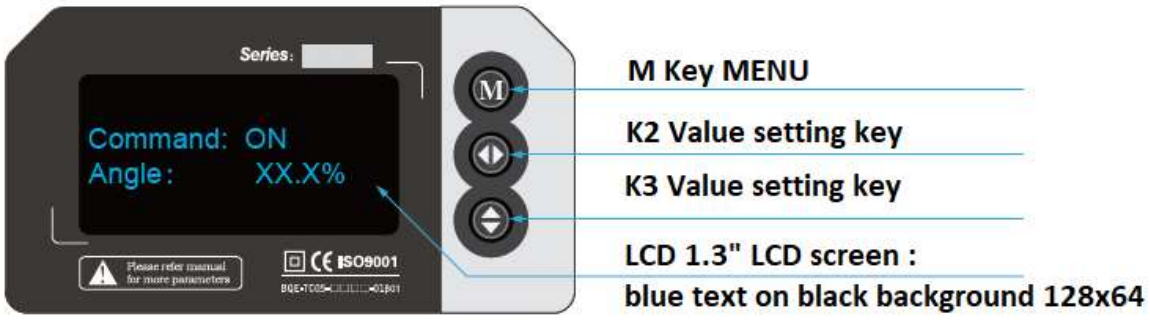


ACTUATOR SETTINGS

The following functions can have their parameters set from the menu accessible on the screen:

STEP	TITLE	FUNCTION AND VALUES
1	Entering the menu	Press the "M" button for more than 5 s.
2	Enter the password	Press the "M" button for more than 5 s. Enter the code "333" (use the keys K2 and K3) Press again the button "M"
		
3	Choice of language	English or Mandarin
		
4	Choosing the direction of rotation of the actuator	**Direct**: 4mA = valve closed / 20 mA = valve open : 0V = valve closed / 10V = valve open
		
		Inverted: 4 mA = valve closed / 20 mA = valve open : 0V = valve closed / 10V = valve open
5	Position by absence of any control signal	In the absence of a control signal, the valve can take 3 positions: ON, OFF or KEEP
		

6	Dead band	This function is used to set the accuracy and the sensitivity of the control: the larger the band, the lower the accuracy; the narrower the band, the more oscillating the system can be. **Setting range:** 0.1 to 9.9% - **Setting by default**: 0.8% 
7	Hysteresis adjustment	This parameter setting is a prerequisite for the next. YES = adjustment is possible NO = no adjustment is possible (value by default) 
8	Hysteresis value	If the previous parameter is "YES", it is possible to set the hysteresis value between 0.1 and 9.9%. The value by default is 0.2%. Do not use the function if there is a play between the valve's stem and the actuator's square. 
9	Manual adjustment of the speed of rotation	This function is used for slowing down the motor. **Range**: 20-100% - Value by default = 100% 
10	Braking time	In order to increase the stability of the motor, the motor will slow down after a short time before reaching its setpoint value position. During current use, this function is not useful. **Range**: 0-95 ms – Value by default = 1 ms 
11	Setting the maximum speed	This setting affects the available torque. Without a special need, do not change it. **Range**: 20-100% - Value by default = 100% 
12	Setting the minimum speed	This setting affects the available torque. Without a special need, do not change it. **Range**: 20-95% - Value by default = 75% 

13	Setting the speed for the stroke	This setting is used for setting a % of the actuator stroke during which it will slow down before reaching the setpoint value position. **Range**: 0.1-20% - Value by default = 10% 
14	Redefining the 4 mA or 10V position	Used to set another position than 0% for the 4 mA value. This function is useful for valves with an opening angle different from 90°. **Range**: -50% +80% - Value by default = 0.0% 
15	Redefining the 20 mA position	Used to set another position than 100% for the 20 mA or 10V value. This function is useful for valves with an opening angle different from 90°. **Range**: 20% +220% - Value by default = 100.0% 
16	Modification of the 4 mA output signal	If a deviation is found on the 4mA output signal, this function is used to adjust it. If the number is increased, the current is higher. If the number is decreased, the current is lower. **Range**: 000_481_A – Value by default 191_A **NB**: always limit the lower value to 20 mA 
17	Modification of the 20mA output signal	If a deviation is found on the 20mA output signal, this function is used to adjust it. If the number is increased, the current is higher. If the number is decreased, the current is lower. **Range**: 191_1000_A – Value by default 909_A 
18	Response time	Used to set the response speed of the valve. The smaller the value, the less sensitive the control. The bigger the value, the more sensitive it is. Increase the value when the response speed is too low. **Setting range:** 1x20x – Value by default 3x 

19	Checking the feed signal	The actuator periodically tests its electrical power supply. A change of a value will change the interval between two tests. In current use, there is no need to change this parameter. 
20	Power supply position by default	This setting is not available on this version (see version T-KT) **Value by default**: KEEP 
21	Capacitor charge	This setting is not available on this version (see version T-KT) **Value by default**: 95% 
22	Alarm test (version 4-20 mA)	This function is used to control whether a defect alarm is broadcast or not. It is especially used for factory testing **Value by default**: ON 
23	Exiting the menu	Press K3 to exit the menu The system will switch back in the automatic checking mode. 

TROUBLESHOOTING

Defect met	Cause of defect	Method of solving
Inactive actuator	Non-connected electrical grid.	Connect to the electrical grid.
	Wrong voltage.	Check the actuator's voltage.
	Motor overheating.	Check the torque on the valve.
	Faulty connection.	Check the connection to the terminal box.
	Damaged start capacitor.	Contact the supplier for repair.
No switch signal	Faulty connection.	Check the connections.
	Damaged microswitch	Change the microswitch
Valve that is not fully closed	Use the return signal from the actuator check.	Receiving a return signal does not mean that the actuator is fully closed, hence do not cut the power supply.
	The hysteresis increases due to wear or between the actuator and the valve's stem.	Readjust the limit cams. Contact the supplier for repair.
Presence of humidity or water in the actuator	Unsuitable cable cross-section being used.	Contact the supplier for repair.
	The cable connection is not leak-tight.	
	Worn sealing gaskets.	
	Loose cover screws.	Dry the internal parts and tighten the cover screws.